


Data Sheet

Staifix Starter Tie

Description


This tie quick and simple to install. It is suitable for use in brickwork and blockwork of up to 3 storeys or 8 metres in height and meets the technical requirements of the NHBC. Supplied complete with an 8mm nylon wall plug. The starter Tie is fixed into the existing wall at an angle of 30° to the horizontal and bent into the bed joints of the new brickwork. Ties should be fixed at 225mm vertical centres and be central to each leaf of the new wall.

1.

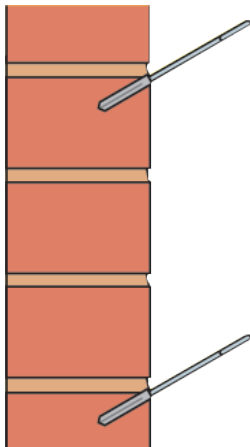

Starter Ties should be fixed at 225mm vertical centres in a line central to the new leaf. Drill 8mm diameter holes, 45mm deep into the existing wall at an angle of 30° to the horizontal.

2.

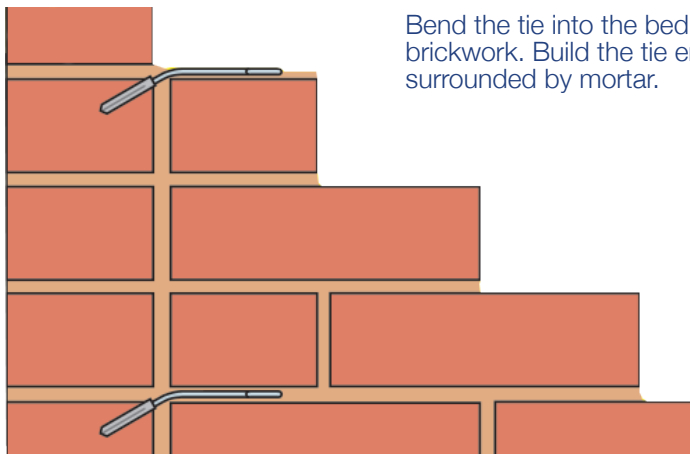

Bend the tie into the bed joint of the new brickwork. Build the tie ensuring it is surrounded by mortar.